

 soundmaster®

CD/RADIO/MP3-MICROSYSTEM



Art-Nr. MCD370SI

DEUTSCH
ENGLISH
FRANÇAIS

NEDERLANDS
Español
PORTUGUÊS

ITALIANO

Hersteller

Wörlein GmbH
Gewerbestr. 12
D-90556 Cadolzburg
GERMANY

Tel.: +49-9103-7167-0
Fax.: +49-9103-7167-12
Email: info@woerlein.com
Web: www.woerlein.com

ENVIRONMENTAL PROTECTION



 
 
Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging.

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.



CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.

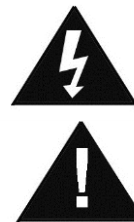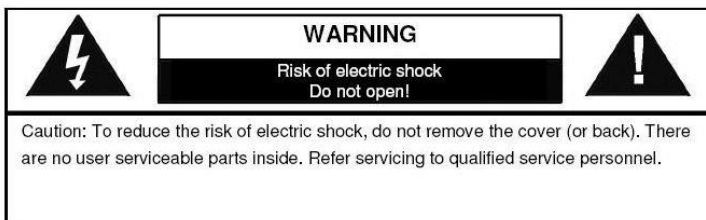

This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.

This symbol indicates the presence of important operating and maintenance instructions for the device.

Safety, Environmental and Setup Instructions

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- Do not open the device. **RISK OF ELECTRIC SHOCK!** Refer opening and servicing to qualified personnel.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- Disconnect device warning: Main plug is used as the connection, so it should always remain ready operate.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.

Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!

- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- It shall be not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
- Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
- Install the device at a safe and vibration-free location.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- The device is equipped with a "Class 1 Laser". Avoid exposure to the laser beam as this could cause eye injuries.
- Only use mercury and cadmium-free batteries.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!! Return the batteries to your dealer or to collection points in your community.
- Keep batteries away from children. Children might swallow batteries. Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are **legally obligated** to return **all batteries** for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*).

Return batteries free of charge to public collection points in your community or to shops selling batteries of the respective kind.

Only return fully discharged batteries.

***) marked Cd = cadmium, Hg = mercury, Pb = lead**

Safety Instructions	1-3
Content	4
Features.....	5
For your Attention.....	6
Panel.....	7
Connections	8
Remote Control.....	9-10
Basic Playback.....	11-13
Trouble shooting	14
Specifications.....	15
Contact and legal information	16

Features

Thanks for your purchase of our product. Please read through this manual before making connections and operating this product. Retain this manual for future reference.

 
- Compatible with CD, MP3, CD-R, CD-RW, etc. • With USB Slot .
- Full function remote control.
- FM stereo radio tuner.

Note: The player is not compatible with all disc;

Some of the disc could not read, caused by the disc is dirty, disc of poor quality, etc.

Package Contents:

User manual

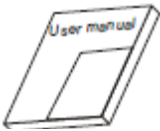

Remote control



Important Note:

Automatic standby switching

To comply with the ERP2 directive, the unit automatically switches to standby after approx. 15 minutes without a signal. To switch the unit on again, press the "STANDBY" button on the unit or on the remote control.

IMPORTANT NOTES

- Please read through this manual before making connections and operating this product. Retain this manual for future reference.
- Don't open the cabinet of this unit. No user-serviceable parts inside. Refer servicing to qualified personnel only.
- Switch off the unit when you don't use it. Switch off the unit and disconnect it from the AC power supply when it is not being used for a long time.
- Don't install the unit in a place exposed to heating sources or direct sunshine.
- Don't install the unit in a place exposed to moisture or rain.
- The apparatus shall not be exposed to dripping or splashing and any object filled with liquids, such as vases shall not be placed on it.
- Install the unit on a horizontal, flat and firm surface with good ventilation. Never block the vents which will cause malfunction resulted from overheating.
- Use a soft and clean rag to clean the outside of the unit . Never clean it with chemicals or detergent. •This book is only a guide for user's operation, not a criterion for configuration.
- Only use attachments/accessories specified by the manufacturer.
- Where the Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.



The exclamation mark is intended to alert the user to the presence of important operating instructions.



 
To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.




This mark indicates this unit belongs to class 1 laser product. The laser beam may produce radiation harm to the directly touching human body.

Panel

FRONT PANEL:

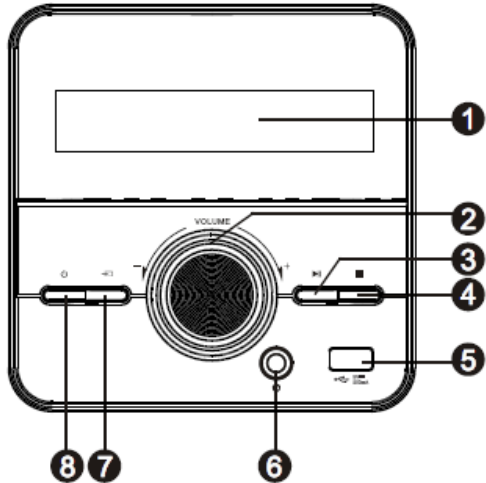


REAR PANEL:

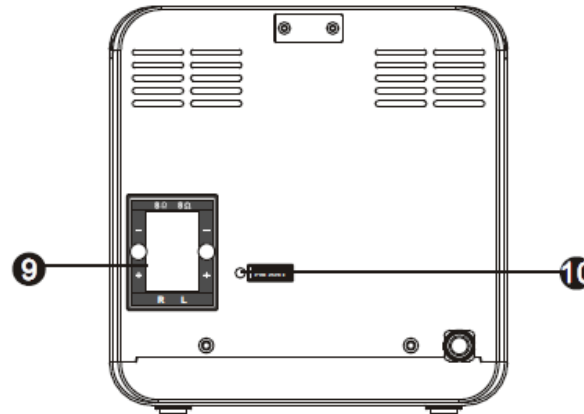 

- 1 DISPLAY SCREEN
- 2 VOLUME ADJUSTOR
- 3 PLAY/PAUSE
- 4 STOP
- 5 USB SLOT

 TOP PANEL:

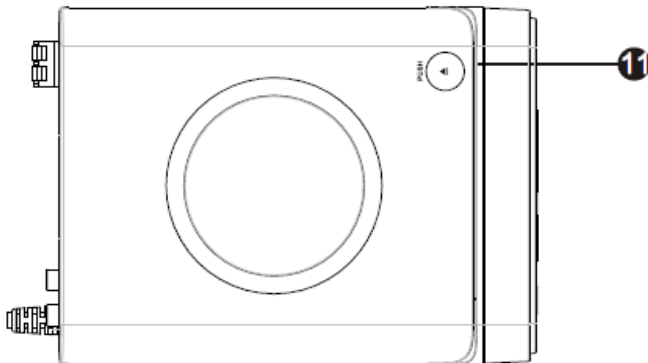

- 6 HEADPHONE JACK
- 7 SOURCE
- 8 STANDBY
- 9 SPEAKER OUTPUT
- 10 FM ANTENNA JACK
- 11 PUSH(press to open the cover)

Listen with earphones/headphones

Connect earphones or headphones to the headphone jack with the volume set low and increase it if required. When earphones or headphones are connected, no sound will be emitted from the connected speaker system.

 


WARNING: Excessive sound pressure from earphones or headphones can cause hearing loss.

Speaker Output

Connect the speakers to speaker output terminals with their attached speaker cables (white for +, black-).

Speaker Audio Input

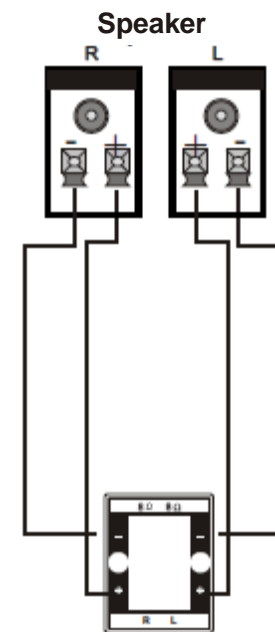

Speaker output

CD Audio Output

 
Remote control

Remote Control Operation


Insert the batteries into the remote control. Point the remote control at the remote sensor on the front panel. The remote control works within a distance of about 8 metres from the sensor and within an angle of about 30 degrees from the left and right side.

Battery Installation


- ① Remove the battery compartment cover on the back of the remote control.

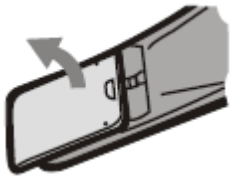

 - ② Load two AAA/1.5V batteries into the battery compartment making sure that the batteries have been inserted with the correct polarities matching the symbols +, - as indicated inside the battery compartment.

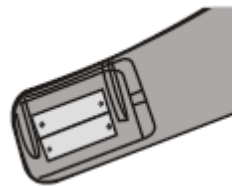


- ③ Replace the cover.

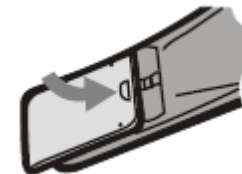 

Note:

 - Remove the batteries when you do not intend to use the remote control for a long time.
- Do not mix new and used batteries, or different types of batteries. •Weak batteries can leak and severely damage the remote control.
- The batteries must not be exposed to excessive heat source, such as sunshine, fire or any other things like that.
- Be environmentally friendly and dispose of batteries according to your government regulations.

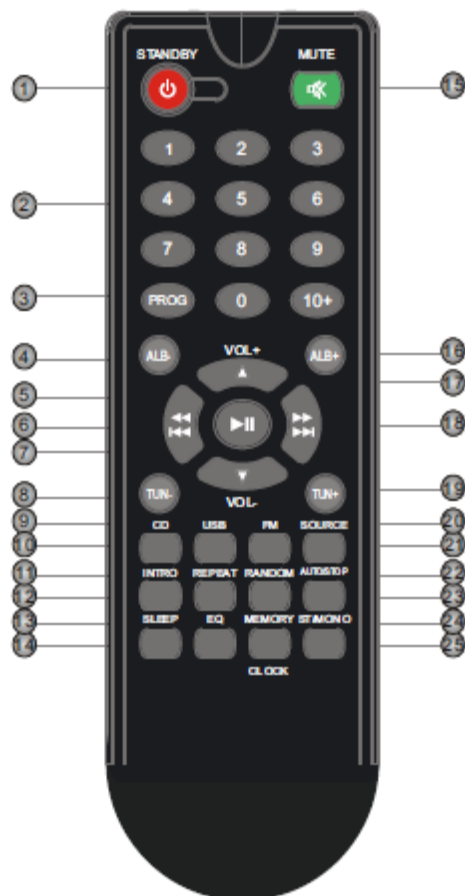

- | | | | |
|----|--------------------------|----|-----------------------|
| 1 | STANDBY | 14 | SLEEP |
| 2 | DIGIT KEYS | 15 | MUTE |
| 3 | PROGRAM | 16 | ALB+ |
| 4 | ALB- | 17 | PLAY/PAUSE |
| 5 | VOLUME+ | 18 | FAST FORWARD/
NEXT |
| 6 | FAST REWIND/
PREVIOUS | 19 | TUNER+ |
| 7 | VOLUME- | 20 | FM |
| 8 | TUNER- | 21 | SOURCE |
| 9 | USB | 22 | RANDOM |
| 10 | CD | 23 | AUTO/STOP |
| 11 | REPEAT | 24 | MEMORY/CLOCK |
| 12 | INTRO | 25 | ST/MONO |
| 13 | EQ | | |

Basic Playback

CD Operation

STANDBY • Press to switch on the unit. Press it again to put the unit in standby mode.



USB • Press to enter to USB mode.



CD • Press to enter to CD mode.



FM • Press to enter to FM tuner mode.



SOURCE • Press repeatedly to select a signal source among CD ,USB and FM mode.



•The digit keys can be used to input numbers or make selection of a track, etc.

AUTO/STOP • Press to stop a playback .



• Press to temporarily pause a playback. Press it again to resume the playback.



• Press to skip to the next chapter/track;














• Hold down for fast forward.



• Press to return to the previous chapter/track.



• Hold down for fast rewind.

-
- VOL+**  • Press [VOLUME+] to turn up the volume.
 - VOL-**  • press [VOLUME-] to turn down the volume
 - PROGRAM**  • In stop mode, press [PROGRAM] and input a number to select a track , press [PROGRAM] again to confirm it, then press [▶] to play.
 - MUTE**  • Press to temporarily switch off the sound. Press it again to switch it on.
 - RANDOM**  • Press to switch the random play mode.
 - REPEAT**  • Press repeatedly to switch the repeat modes.
 - SLEEP**  • Press repeatedly to select a sleep time and choose option **SLEEP OFF** to disable the sleep function , after which the unit will go into standby mode automatically. Then press [STANDBY] to wake it up.
 - INTRO**  • Press to introduce the track of the disc in order, it takes approximate ten seconds for each track.
 - EQ**  • Press to switch the equalizer modes.
 - ALB+/-**  • Press to skip the catalogue, it only available for MP3 disc.
 - MEMORY/CLOCK**  • Hold down to go into clock adjust mode in standby mode, then combine previous/next button and clock button to adjust time you desired.
-

Basic Playback

Tuner Operation

The following buttons are used in tuner mode. Press [SOURCE] to select tuner mode.

ST/MONO • Press to switch between Mono and Stereo reception of the broadcast signal in FM mode.



TUN+/- •TUN+: press to fine tune (increase) the frequency; •TUN-: press to fine tune (decrease) the frequency. • Hold down [TUN+/-] to increase/decrease the frequency continuously.



AUTO/STOP • Press to do auto scanning for the broadcasting radio channels, press it again to stop auto scanning.



MEMORY • After tuning in a new frequency, press [MEMORY], then select a preferred station by inputting the corresponding numbers to save it as a preset station.



•The digit keys can be used to select a preset station.

For example, press [2] to select channel 2; press [10+] first, then press [1] and [5] to select channel 15.

• Press to skip to the next preset station.



• Press to skip to the previous preset station.



NOTE: In Tuner mode, [VOLUME+/-], [MUTE] buttons are also active. For details, please refer to the introduction of the **CD operation** in this chapter.

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
No Power	•The AC power cord is not connected to the power supply or is not connected to a power supply securely.	• Please check that the AC power cord is connected securely.
Sound There is no sound or the sound is distorted.	•The audio cables aren't connected securely. •The volume is set to the minimum level. •The sound is switched off.	•Connect the audio cables securely. •Turn up the volume. •Press [MUTE] on the remote control to switch on the sound. •Press [PLAY/PAUSE].
Unable to play a disc	• This disc is placed in the disc tray in a wrong way • The rating of the disc is higher than the rate set in the parental control item. • The unit isn't compatible with the disc. • The disc is dirty.	• Check that the disc is placed in the disc tray with its label side upwards. • Reset the settings in the parental control item. •/ • Clean the disc.
The player breaks down when a USB drive is inserted into the player.	•The connected USB drive is probably not a certified one.	•The player cannot play any uncertified USB drive. In case the player breaks down, turn it off, disconnect the power cord from the AC outlet and unplug the USB drive from the player. Then, power on the player again. The player will resume the normal status.
The buttons on the unit doesn't work.	•The unit is being interfered with static electricity etc.	• Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.
The remote control does not function.	•There is no battery in the remote control. •The batteries are out of charge. •The remote control isn't pointed to the remote sensor. •The remote control is out of its operating area. •The unit is shut down.	• Install two AAA/1.5V batteries in it. • Replace the batteries with new ones. • Make sure that the remote control is pointed to the remote control sensor. • Make sure the remote control is within the operating area. • Switch off the unit and disconnect it from the AC outlet. Then power on the unit again.

Specifications

Power supply		AC ~100-240V,50/60Hz
Power consumption		10W
Working environment	Temperature	-10~+35C
	Relative humidity	5%~90%
Disc output	Frequency Response	20Hz~20kHz
	S/N(A weight)	>80dB(1kHz)
	F r equency Range	≥70dB(1kHz)
	THD+NOISE	≤-60dB(1kHz)
	WOW FLUTTER	Below the limit of apparatus measure
Tuner	F M ban d Range	87.5MHz~108MHz
Power output (Max)		2.5WX2
Frequency response		±3dB(20Hz~20kHz)

Contact and legal information

For more information, see www.woerlein.com

Service requests to service@woerlein.com

Technical changes and misprints reserved.

Copyright by Wörlein GmbH, 90556 Cadolzburg

Reproduction only with permission of Wörlein GmbH