



DEUTSCH
ENGLISH
FRANÇAIS
NEDERLANDS
ITALIANO
ESPAÑOL

PORTUGUÊS
NORSK
DANSK
SVENSKA
SLOVENSKÝ
ČEŠTINA

Hersteller

Wörlein GmbH
Gewerbestr. 12
D 90556 Cadolzburg
GERMANY

Tel.: +49 9103/71670
Fax.: +49 9103/716712
Email: info@woerlein.com
Web: www.woerlein.com



ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

 
	WARNING Risk of electric shock Do not open!	
<p>Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.</p>		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind.

Only return fully discharged batteries

*) marked Cd = cadmium, Hg = mercury, Pb = lead

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type



 
To prevent possible hearing damage, do not listen at high volume levels for long periods

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.

- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.

LOCATIONS OF CONTROLS

- 1 Dust cover
- 2 Left speaker
- 3 3.5mm headphone jack
- 4 Power LED indicator
- 5 Power on/off/ volume knobs
- 6 Right speaker
- 7 Spindle adaptor
- 8 Turntable speed selector
- 9 Tone arm rest
- 10 Line out socket
- 11 Auto stop switch
- 12 AC cord

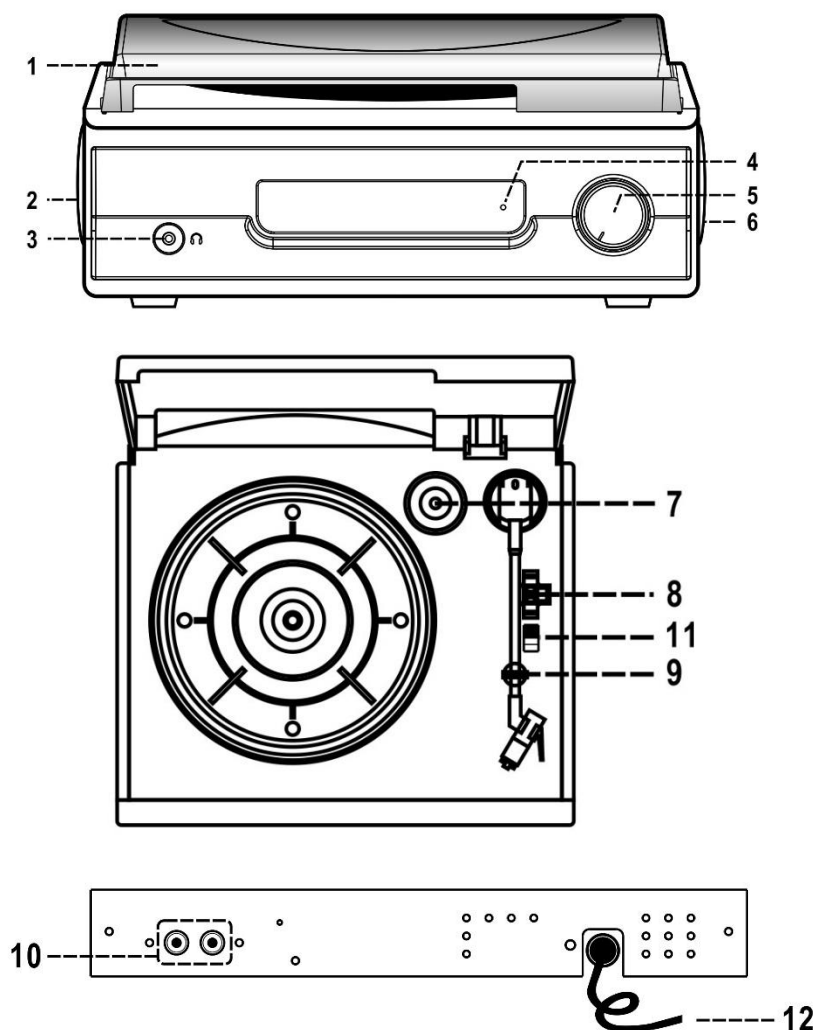

Care and maintenance

- Clean the turntable with a soft damp cloth and let all parts dry completely after cleaning.
- Do not use any aggressive cleaners, brushes with nylon bristles, sharp or metallic cleaning utensils, knives, hard scrapers and the like. They could damage the surfaces of the turntable.
- Do not immerse the turntable in water and do not let water getting into the housing of the turntable.

Storage

- Unplug the power adapter and clean the turntable before storage.
- Always store the turntable in a dry and clean place.

GETTING STARTED

1. Unpack all parts and remove protective material.
2. Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
3. Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.
4. Connect the power cord (12) to AC outlet

Power on or off

1. Tune the "POWER ON/OFF/VOLUME" knob (5) to switch on the system and if the power LED indicator (4) is on with red light, it's mean the power supply is normal. Now your system is ready to play the music.

To completely disconnect the radio from power, remove the plug of the power adapter from the wall socket.

Controlling the volume

 
Tune the "POWER ON/OFF/VOLUME" knob (5) to desire level.

LINE OUT CONNECTION

You can connect the system to your whole hi-fi system by connecting the line out socket (10) to the auxiliary input socket with a RCA cable (not included).

TOP COVER ASSEMBLY


1. Push the metal bracket to rear side.
2. Connect the metal bracket to the top cover
3. Connect the hinge of the top cover to the main unit

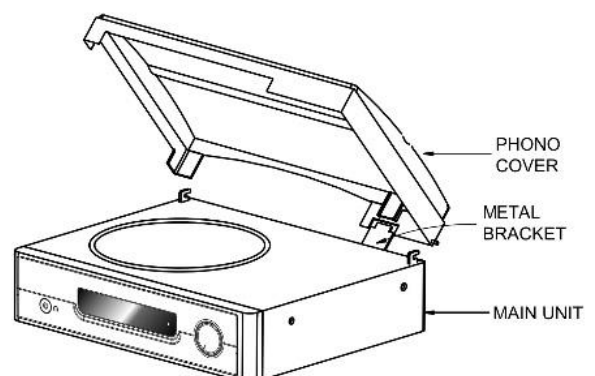


PHONO

Note:

 - Remove the stylus protector.
- Be sure that the tone arm is being detached from the tone arm rest before operating and re-secured again afterwards.

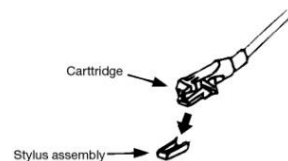

1. Turn on the system until the “ power LED “ light up
2. Set the speed selector (8) to the proper position depending on the record to be played.
3. Place the record on the platter (use the spindle adaptor (7) if required).
4. Lift the tone arm from the rest and slowly move it to the record side. The platter will start to rotate.
5. Place the tone arm to the desired position of the record.
6. Adjust the volume (5) to the desired level.
7. At the end of record, the platter will automatically stop rotating. Lift the tone arm from the record and return it to the rest (9).
8. To stop manually, lift the tone arm from the record and return it to the rest (9)

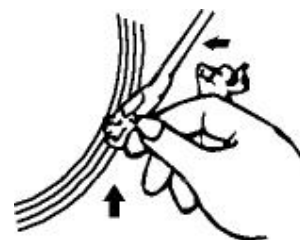 

Remark : As some kind of record the auto-stop area was out of the unit setting, so it will stop before the last rack finish. In this case, select the auto-stop switch (11) to “ off “ position, then it will run to the end of the record but will not stop automatically (turn off the unit by power button or switch back the auto-stop switch (11) to “ on “ position to stop the platter rotate). Then put back the tone arm to the rest position.

TECHNICAL SPECIFICATIONS

Power supply AC 230V~50Hz
 Power consumption 8 Watt

Remark : due to ErP stage two requirement and protect the environment. The unit will switch to standby mode automatically once no any music playing over 15 minutes.

IMPORTER

Wörlein GmbH Tel.: +49 9103 71 67 0
 Gewerbestrasse 12 Fax.: +49 9103 71 67 12
 D 90556 Cadolzburg Email: service@woerlein.com
 Germany Web: www.woerlein.com



Technische Änderungen und Druckfehler vorbehalten
 Copyright by Woerlein GmbH, 90556 Cadolzburg, www.woerlein.com
 Vervielfältigung nur mit ausdrücklicher Genehmigung der Woerlein GmbH