 


General controls

Main unit

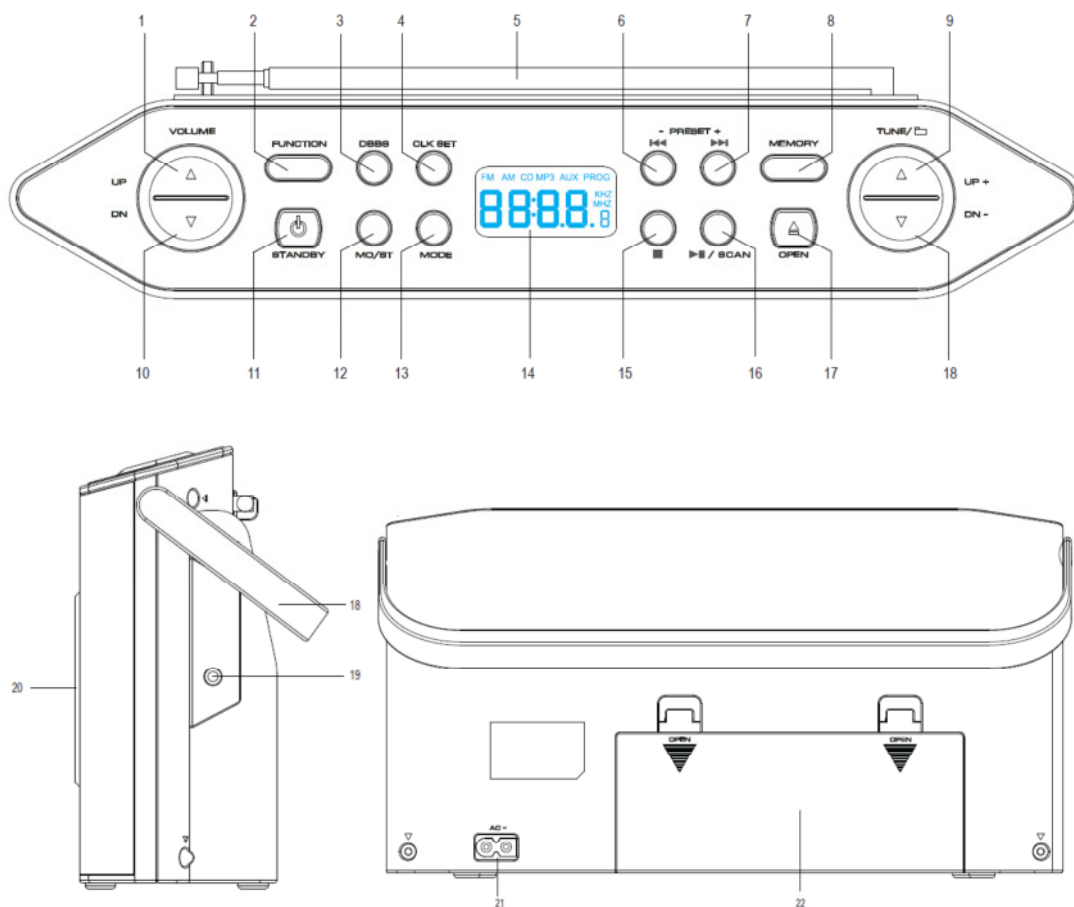

- | | |
|----------------------|---|
| 1. VOLUME UP | 13. MODE: REPEAT/ REPEAT ALL/
RANDOM |
| 2. FUNCTION | 14. LCD DISPLAY |
| 3. DBBS | 15. ■ STOP |
| 4. CLK SET | 16. ▶ / SCAN |
| 5. FM ANTENNA | 17. CD DOOR OPEN |
| 6. ◀◀ / PRESET - | 18. TUNE - / FOLDER DOWN |
| 7. ▶▶ / PRESET + | 19. 3.5 mm HEADPHNOE JACK |
| 8. MEMORY | 20. CD DOOR |
| 9. TUNE +/ FOLDER UP | 21. AC INPUT |
| 10. VOLUME DOWN | 22. BATTERY COMPARTMENT |
| 11. ⏻ / STANDBY | |
| 12. MONO / STEREO | |

General controls

Switch on or off the unit

•Press **⏻ STANDBY** to turn the unit on or off (standby mode).

Control the audio output

•Press **VOLUME UP/ DN** to adjust the sound level.

The current volume shows on the display briefly before returning to the previous display.

Eco power saving mode

- This unit has a built-in power saving control which will automatically switch into STANDBY mode to reduce power consumption when it detects that the unit is not in use (idle).
- This automatic switching to STANDBY mode will happen approximately 10-15 minutes after the following circumstances:

CD mode: CD playback has stopped.

- To re-activate the unit after it has automatically switched to standby mode, press the **STANDBY** key to switch on the unit.

Playback features:


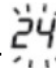
- Repeat / ALL playback, press **MODE** key
- Random playback, press **MODE** key until "RAND" text show on display

Clock timer and sleep function

Clock

To set the time:

1. Switch the unit to Standby mode press and hold CLK SET key in 2 seconds. Press TUNE UP + or TUNE DN - to select 12 or 24HR.

Display shows  or  hour on the display.



2. Press CLK SET to confirm.
3. Press TUNE UP + or TUNE DN - to set the hour time.



4. Press CLK.SET to confirm.
5. Press TUNE UP + or TUNE DN - to set the minute time.



6. Press CLK SET then the clock time is now set.

Note:

- When the digital clock is not set, the digital clock display shall continuously flash to indicate that the correct time has not yet been set.

CD playback

CD/ MP3 playback operations








To access the CD mode:

- Press **FUNCTION** key repeatedly until CD mode is selected.
- The CD icon lights on the display when CD mode is selected.

To start CD playback:





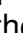

1. Press OPEN button to open the disc compartment door
“OP” shows on the display.
2. Load an audio CD or data CD on to CD tray.
3. Press the CD door at the edge to close the disc compartment door. The unit should read the disc information. Audio CD Total number of tracks

To operate the playback:

1. Press  to start playback.
2. During playback, press  to pause it. Press again to resume.
3. Press  or  to skip to the previous or next track.
4. Press and hold  or  to scan backward or forward within the same track. Release the button to resume to playback at normal speed.
5. Press  to stop the playback.







To program the playback:

The program playback mode lets you program a total of 20 tracks in any desired order. You can also program the same track to play several times within a program sequence.

1. In CD mode, press  to stop any disc playback.
2. While playback is stopped, press **MEMORY** key
 - **PROG** and **P 01** show on the display.
- P** stands for program mode whereas **01** stands for the first program location.
3. Press  or  to select the track for the first program location.
4. Press **MEMORY** to store the selected track into the program location.
5. Repeat steps 3 and 4 to program more tracks. Up to 20 tracks can be programmed. If program tracks over than 20, the display will show “FUL” it means memory is full.
6. Press  to start playback of the programmed tracks. Playback will stop after all programmed tracks are played.
7. To play back the programmed tracks again, press .
8. To cancel the programmed sequence from the memory, press  twice in the program mode, or open the disc compartment door
 - **PROG** disappears from the display.

To browse and listen to a music file:

Once connected, the unit will search for mp3 files.

1. Press  to start playback.
2. Press  to pause the playback, press again to resume.
3. Press  or  to skip to the previous or Press **TUNE/**  **UN / DN** to select the folder.
4. Press  to stop the playback.

Other playback features:

- Repeat / ALL/ FOLDER playback
- Random playback

The operation procedures are the same as CD playback. Refer to general control for details.

FM (UKW)RADIO

To access the FM RADIO mode:

 
- Press **FUNCTION** key repeatedly until “r A d” show on display
- The FM text lights on the display when FM mode is selected.

To perform full scan and store

- Press and hold 2 seconds on ►■ / **SCAN** key, this unit will perform automatic full scan.

To perform FM frequency search:

- Press TUNE UP + or TUNE DN - to adjust the frequency. Use this method to tune to weak or distant stations that are not strong enough to be recognized by the automatic searching.

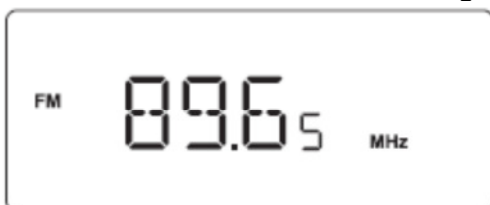

- Press and hold TUNE UP + or TUNE DN - until the frequency on the display begins to change and then release the button to automatically search for the next available station.

To store a station as a preset:

1. Tune to a frequency and then press **MEMORY** key.
2. Display will show “P01” and then press **MEMORY** key to preset channel number



.• You can save up to 30 channels in FM band To listen to a preset station

23.:• In FM mode, press ◀◀ / PRESET – or ▶▶ / PRESET + key to recall the preset station.

To turn on or off the stereo sound in FM mode:

- Press ►■ **MO.ST** key to turn on or off the stereo sound.

Antenna

FM antenna

- Pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).

Technical specifications

Power requirements AC 230V~ 50Hz
DC 9V (UM-2, C size x 6)

Power consumption: 15W

Tuner

FM Tuning range: 87.5 MHz to 108 MHz

Preset memory stations: FM-30

Specifications are subject to change without further notice.

Copyright by Wörlein GmbH

