

ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging.

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

**CAUTION - INVISIBLE LASERRADIATION WHEN OPENING
THE COVER OR PRESSING THE SAFETY INTERLOCK.
AVOID EXPOSURE TO THE LASER BEAM.**



WARNING

Risk of electric shock
Do not open!



Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device.

Safety, Environmental and Setup Instructions

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- Do not open the device. **RISK OF ELECTRIC SHOCK !** Refer opening and servicing to qualified personnel.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/customer center.
- The device is equipped with a "Class 1 Laser". Avoid exposure to the laser beam as this could cause eye injuries.
- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!! Return the batteries to your dealer or to collection points in your community.
- Keep batteries away from children. Children might swallow batteries. Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.




Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are **legally obligated** to return **all batteries** for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*).

Return batteries free of charge to public collection points in your community or to shops selling batteries of the respective kind.

Only return fully discharged batteries.

***) marked Cd = cadmium, Hg = mercury, Pb = lead**

LOCATION OF CONTROLS

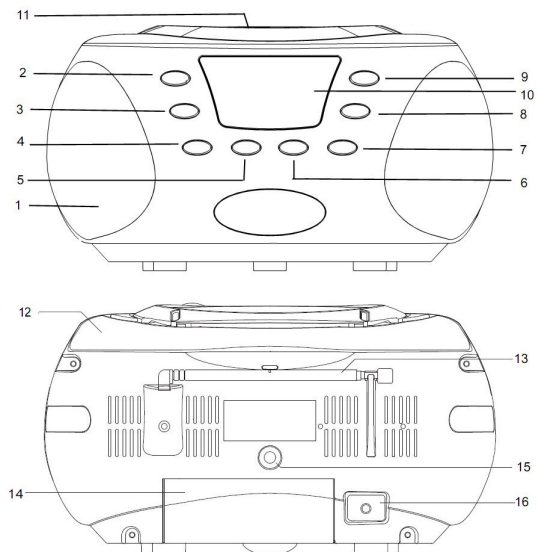

- | | |
|-------------------------------|--------------------------|
| 1. Speaker | 10. LCD display |
| 2. POWER / SOURCE Button | 11. CD door |
| 3. MODE/MEMORY/PROGRAM Button | 12. Handle |
| 4. VOLUME – Button | 13. FM Telescope Antenna |
| 5. VOLUME + Button | 14. Battery Door |
| 6. SKIP / TUNE DOWN Button | 15. Aux-in Jack |
| 7. SKIP / TUNE UP Button | 16. AC Socket |
| 8. M+ / STOP Button | |
| 9. PLAY / PAUSE/BAND Button | |

AC OPERATION

Connect the plug to the AC socket of the unit and the other end to a standard AC outlet.

ATTENTION

1. Do not plug or unplug the power cable while you have wet hands;
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet;
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

BATTERY OPERATION

Disconnect the AC Cord Set completely. Open the Battery Compartment Door and insert 6 pieces UM-2 "C" size batteries into the battery compartment with battery polarity as shown inside the battery compartment.

RADIO OPERATION

Press POWER / SOURCE button to select the radio mode. It will show "STEREO" on the LCD display if the signal is strong. Press BAND button to switch from STEREO to MONO and vice versa.

MANUAL STATION SELECTION

1. Press the TUNE UP or TUNE DOWN button step by step to tune to the desired radio stations
2. Press VOLUME + or VOLUME – Button for the desired volume level;

SEARCH STATION OPERATION

1. Press and hold the TUNE UP or TUNE DOWN button for approx. 1 second, it will start to search the next radio station in the direction of the search.
2. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.
3. Press VOLUME + or VOLUME – Button for the desired volume level;

ANTENNA

For best reception, fully extend the FM Antenna to receive FM stations.

MEMORIZE RADIO STATIONS

1. Tune to the desired station.
2. Press MODE/MEMORY/PROGRAM button, The "PROG" will flash in the left bottom and LCD display will show ' PXX ' (XX indicates the preset memory).
3. Use SKIP UP or SKIP DOWN button to cycle through the preset stations 1-10
4. Press MODE/MEMORY/PROGRAM to store the radio station in the memory.
5. Repeat steps from 2 to 3 to store more tracks in memory. You can store up to 20 radio stations in the memory.

TO SELECT THE RADIO STATION IN THE MEMORY

Press M+ / STOP button for the radio station memory and press the M+ / STOP button skip up to the next memory station.

CD FUNCTION

To play a CD, please follow the steps underneath:

1. Press POWER / SOURCE button and select the CD mode.
2. Open the CD door, Insert the CD with the printed side facing up and close the CD door;
3. Disc information (total number of tracks) will appear on the LCD display and press PLAY/PAUSE button to play the CD.
4. Press VOLUME + or VOLUME – Button for the desired volume level;
5. Press STOP button to stop playing the CD.

Skip Mode

1. During play or pause mode, press the SKIP UP button to go to the next track.
2. During play or pause mode, press the SKIP DOWN button to go back to the beginning of the track. During play mode, press the SKIP DN button twice will go back to the previous track

Programming the CD Player

The programming of the CD player should be done during STOP mode.

1. Press MODE/MEMORY/PROGRAM button, The "PROG" will flash in the left bottom and LCD display will show ' PXX ' (XX indicates the preset number of track to be programmed).
2. Press the SKIP UP or SKIP DN buttons to select the desired track. Press the PROGRAM button again to store this track in memory.
3. Repeat steps from 2 to 3 to store more tracks in memory. You can store up to 20 tracks in the memory.

4. Press the PLAY/PAUSE button to play the disc in the programmed order.
5. To stop playing, press the STOP button.
6. To cancel the programming list, press the STOP button and open the CD door or press SOURCE button.

Repeat Function

Repeat 1: Press REPEAT button before or while playing the song. The REPEAT symbol "↺" will show on the LCD display.

Repeat all: Press REPEAT button twice. The REPEAT symbol "↺" will show on the LCD display.

To Cancel Repeat Function: Press REPEAT button three times. The REPEAT indicator will be cleared from the display.

AUX IN CONNECTION

1. Press POWER / SOURCE button and select the Aux-in mode. The display will show "AUX".
1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your audio device and the other side to the aux-in jack on the unit.
2. Turn on your audio device and follow the playback instruction.
3. To stop this function, simply turned off your audio device.

BLUETOOTH STREAMING

1. Press POWER / SOURCE button and select the bluetooth mode. The LCD display will show "bt" and flash.
2. Turn on your Bluetooth of your Bluetooth device and search the boombox for connection. Your Bluetooth device should find "SCD3800".
3. If the connection is successful, 'bt' will stop flashing.
4. Select and play the audio files through your Bluetooth device.
5. To stop this function, switch to other mode or shut down your Bluetooth of your Bluetooth device

AUTO PAIRING


Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

Important Note

Automatic standby switching

To comply with the ERP2 directive, the unit automatically switches to standby after approx.. 10 minutes without a signal. To switch the unit on again, press the "POWER / SOURCE" button on the unit.

Specifications

Frequency Range:	FM 87.5 - 108 MHz
Power Supply:	AC 100V to 240V ~ 50/60Hz
	DC 9V  (UM-2 x 6)



Specifications are subject to change without further notice.

Importer

Wörlein GmbH
 Gewerbestrasse 12
 D 90556 Cadolzburg
 GERMANY